

---

# EVPoint EV CHARGER

## USER MANUAL AND INSTALLATION GUIDE

---

Model EVNET-7KW-S/T2-1PH: 32A (EVPoint EV7)



EVPOINT Ltd. | 15-17 Tintyava Str., 1113 Sofia, Bulgaria | [www.evpoint.bg](http://www.evpoint.bg)  
Technical support: [support@evpoint.bg](mailto:support@evpoint.bg) | Sales department: [sales@evpoint.bg](mailto:sales@evpoint.bg)  
Phone: 070070250; +359889599207

You can download the electronic version of the manual by scanning the QR codes below:



*Ръководство на български език*



*User manual in English*

# Table of Contents

1.	Overview.....	3
1.1.	Product description and features .....	3
1.1.1.	Description .....	3
1.1.2.	What’s in the box? .....	3
1.1.2.1.	Illustrated Dimensions .....	4
1.1.3.	Features.....	6
1.2.	Device specifications.....	7
1.2.1.	EMI compliance and other standards .....	8
1.3.	Safety and precautions .....	8
2.	Installation guide .....	9
2.1.	Pre-requisites.....	9
2.1.1.	Tools and materials.....	9
2.1.2.	Site survey and selection.....	9
2.1.3.	Electrical wiring and breaker requirements .....	9
2.2.	Installation: Mechanical .....	13
2.3.	Installation: Electrical.....	15
2.3.1.	Overall system wiring diagram.....	15
2.3.2.	EVNET wiring diagram.....	15
2.4.	Installation: CT clamp .....	17
2.5.	Installation: commissioning .....	17
2.5.1.	Accessing the web client and preview .....	18
2.6.	Installation: troubleshooting.....	25
3.	User Manual .....	26
3.1.	Using the charger and the app .....	26
3.1.1.	DLM – using more than one charger in an installation (fleet, mixed/public use).....	27
3.2.	Troubleshooting (software and hardware problems) and FAQ .....	27
3.3.	Maintenance and cleaning .....	27
4.	Appendix I: Error state description with error codes and light indication explained .....	28
5.	Appendix II: OCPP and Manufacturer Configuration Keys .....	31
6.	Decommissioning and disposal .....	32
7.	EVPoint EV7 setup procedure .....	33

# 1. Overview

List of abbreviations:

**EV:** Electric Vehicle

**PHEV:** Plug-in Hybrid Electric Vehicle

**EVSE:** Electric Vehicle Supply Equipment

**AC:** in reference to Alternating Current

**DC:** in reference to Direct Current

**PE:** Protective Earth

**Tethered:** in reference to an EVSE with integral charging cable of fixed length

**Socketed:** in reference to an EVSE possessing a socket that accepts Mode 3 charging cables

**RCD (AC/DC):** Residual Current Device, a safety device, designed to interrupt power in the event that a fault leakage current to ground occurs

**CB/MCB:** in reference to Circuit Breaker or Main Circuit Breaker

**CT (also CT clamp):** Current Transformer, an electrical device for non-contact measurement of current in a conductor

## 1.1. Product description and features





### 1.1.1. Description




The EVNET-7KW-S/T2-1P:32A, EVNET for short, is a single-phase electric vehicle charging station, available in socketed and tethered models. With a compact design, advanced smart charging and safety features, and a maximum current of 32A (7.4 kW supplied power), the EVNET is ideally suited for home and public charging of EVs and PHEVs. This smart charger supports remote monitoring and configuration via a mobile app, which allows the user to control how and when their vehicle is being charged.

### 1.1.2. What's in the box?

The EVNET comes packaged in a carton containing the main charger unit, access RFID card, and felt screw cover pads (x4). The tethered model is packaged with a 5 meter charging cord with Type 2 connector and appropriate cable gland for mounting to the main body.

1.1.2.1. Illustrated Dimensions

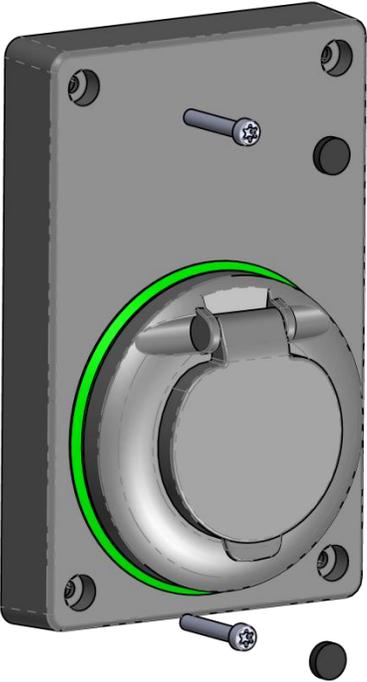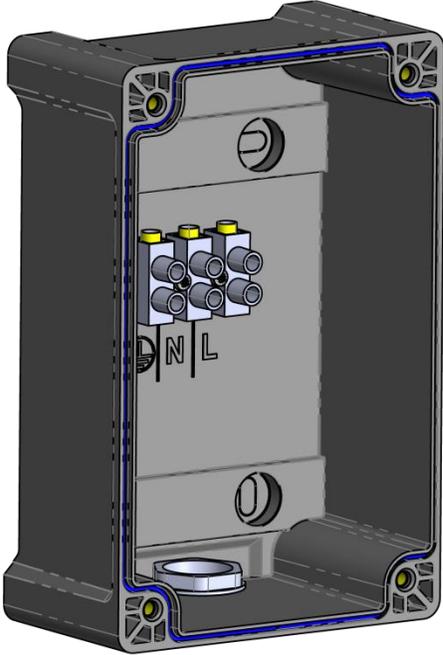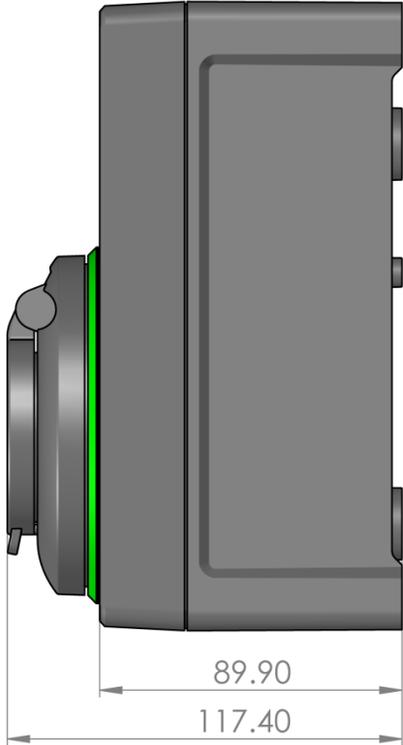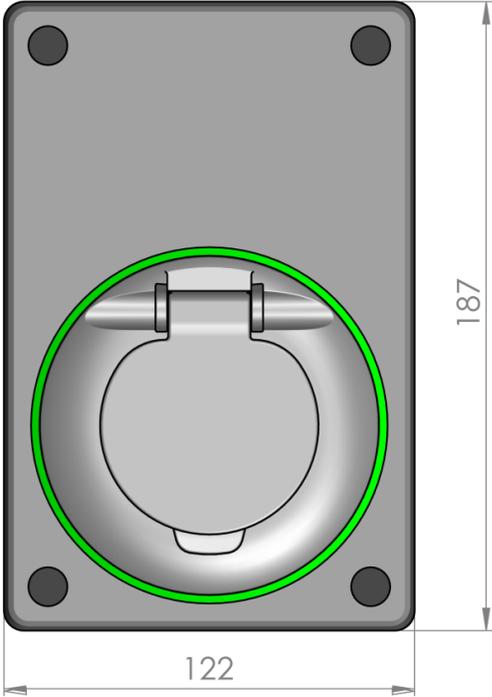

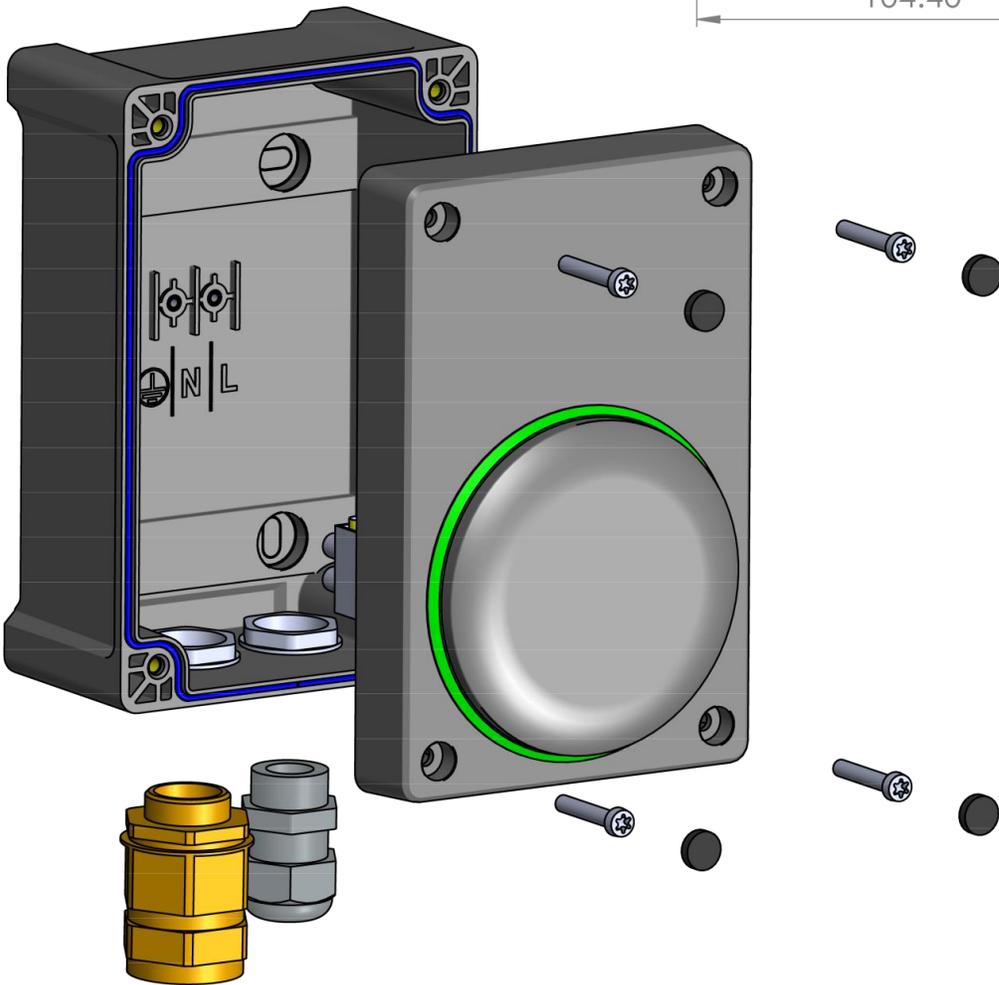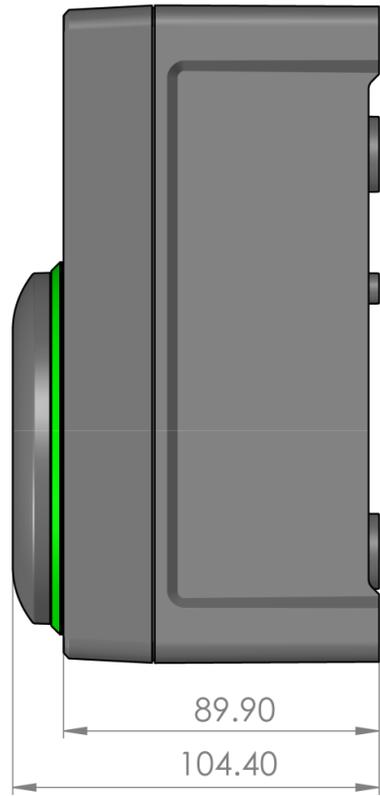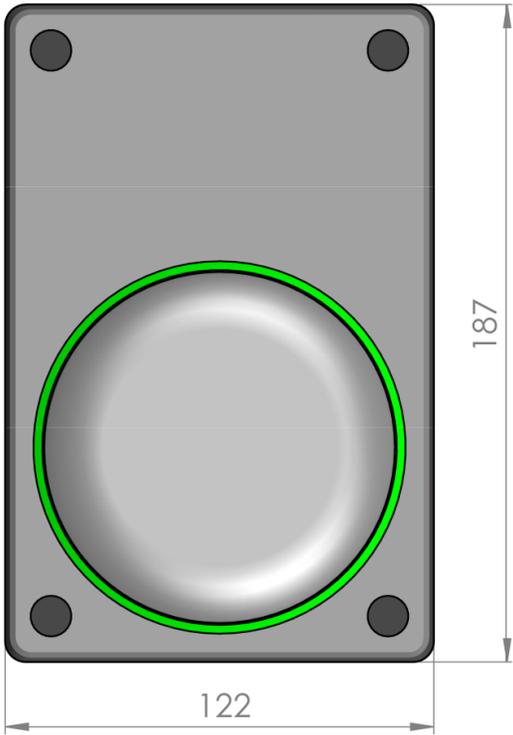

### 1.1.3. Features

#### *Smart and efficient charging*

The EVNET belongs to a class of EVSE called smart chargers, because its entire functionality can be controlled remotely and automatically. This is enabled by the OCPP 1.6J protocol support embedded in the charger. This is a universally accepted control protocol for charging stations, meaning that any OCPP-based server can talk to, control, and remotely update the EVNET, independent of service provider and other factors.

The main benefits of smart charging are the ease of use and flexibility it offers, because it enables the user to control the time, duration, and amount of charging that is delivered to their EVs. In locations where electricity rates are variable throughout the day, this translates into substantial energy bills savings, as the charger can be configured to take advantage of lower energy prices during off-peak periods. Additionally, the EVNET has been designed to function with home solar installations. Thus, it can be set to provide charging only when excess energy is being generated, providing a very efficient utilization of energy resources. Smart charging also enables multiple chargers in a location to communicate with each other, and best utilize the available power to optimally charge several EVs.

The EVNET requires an internet connection to execute its smart functions. It can be configured to support a primary and secondary network interface. For example, it can maintain a wireless network connection, but fall back to GSM or wired Ethernet in case of poor connectivity or router failure. If no network connection can be established, the EVNET is capable of operating in a configurable “offline plug-in charge” mode, whereby it works as a simple EVSE, providing the maximum permissible charging power when an EV is connected.

#### *Access control*

As the EVNET is intended for both residential and public applications, it has a number of access control functionalities, such as RFID (“smart card”) authorization, mobile app authorization, and full control by the OCPP server backend. Thus, a user can configure the access to their charger(s) from basic unrestricted, to higher levels of control, based on their application.

#### *Rugged compact design*

The EVNET is designed to have a small footprint and to be easily installed in various locations, both indoors and outdoors. Despite its miniature size, it is a fully-fledged single-phase charger and can deliver the maximum permissible power. Models are available as either socket- or tethered-type, giving clients flexibility in designing their EV charging experience.

#### *Built with safety in mind*

The EVNET is designed with multiple safety interlocks in order to prevent the hazards associated with high-current, high-power devices, such as electrical shocks, fires, and equipment damage. It monitors the state of the electrical network, and using a CT clamp, can monitor total installation consumption. The EVNET has a built-in AC/DC RCD, and will prevent leakage currents from causing damage to people and devices. The charger utilizes both sound and light signaling to report its state and possible faults, enabling the quick and safe detection of problems.

## 1.2. Device specifications

Model	EVNET-7KW-S-1PH: 32A	EVNET-7KW-T2-1PH: 32A
Power	7360 W	
Nominal voltage $V_n$ Working voltage range	230 VAC, 1-phase $\pm 20\%$ deviation from $V_n$	
Maximum charging current $I_{max}$	32A	
Protections	<ul style="list-style-type: none"> <li>· RCD Type A + DC sense (6mA)</li> <li>· Neutral voltage (70 <math>V_{rms}</math>)</li> <li>· Overcurrent (Overcurrent protection trip when <math>I_L &gt; 1.2 \times I_{max}</math>)</li> <li>· Temperature (limiting 72°C -78°C, fault at 79°C)</li> <li>· Undervoltage (shutdown at 115<math>V_{rms} \pm 10 V_{rms}</math>)</li> <li>· Overvoltage (shutdown at 300<math>V_{rms} \pm 10 V_{rms}</math>)</li> </ul>	
LED Indication	<ul style="list-style-type: none"> <li>· RGB LED light ring around the type II connector</li> <li>· 4 states (ready / preparing / charging / fault)</li> </ul>	
Vehicle connection	Tethered cord, terminated by EV plug Type II (5m length)	Type II EU Socket with cover
Backend Connectivity	<b>WLAN:</b> 802.11 b/g/n/e/i (2.4GHz) <b>Ethernet:</b> via internal RJ45 port <b>GSM:</b> 2G (optional: 3G, LTE CAT M1, CAT NB1)	
Backend protocol and smart charging capabilities	OCPP 1.6J - Power profiles supported: Default, TxProfile, MaxProfile	
Auxiliary connectivity	<b>Bluetooth (BLE 4.0):</b> for configuration and diagnostics only	
Wireless capabilities	<b>Access Point:</b> integrated web server for settings and diagnostics (web client)	
	<b>Station:</b> for backend connectivity	
	<b>Note:</b> Supports simultaneous Access point and Station functionality	
RFID	TK4100 compatible (125 kHz), optional NFC	
Earth disconnection (PEN conductor)	Neutral-to-Earth fault: $V_{N-PE} > 70V_{rms}$ Line to Neutral 207V up to 253V	
Measurements	RMS Voltage, RMS current, Active power, Active energy	
Dimensions (HxWxD)	187 x 122 x 118 mm	187 x 122 x 104 mm
	7.4 x 4.8 x 4.6 in	7.4 x 4.8 x 4.1 in
Weight	0.9 kg / 2 lb (without cord)	1.1 kg / 2.4 lb
IP Rating	IP54	
Temperature	Operational Limiting Range: -40°C - +70°C	
	Transportation Limiting Range: -40°C - +85°C	
	Transportation Limiting Range: -40°C - +85°C	
Humidity	Annual: <95% non-condensing	
Mechanical Class	M1	
Electromagnetic Class	E2	
Environmental Class	3K7	

### 1.2.1. EMI compliance and other standards

The EVNET is compliant to the following standards and directives:

- **General:** IEC 61851-1:2017 Part 1, BS 7671:2018
- **EMC:** IEC 61851-21-2:2018 Part 21-2 (Emissions Class B, Immunity – Residential Environments); Class B for EN 55032:2015, EN 61000-3-2: 2014, EN 61000-3-3: 2013, EN 61000-4-2: 2009, EN 61000-4-4: 2004, EN 61000-4-5:2014; EN 61000-4-8: 2009, EN 61000-4-11: 2004
- **Radio equipment:** Radio Equipment Directive 2014/53/EU, EN 62311:2008; **GSM module** - EN 60950-1:2006 & A11:2009 & A1:2010 & A12:2011 & A2:2013, ETSI EN 301 489-1 V2.2.0, EN 301 511 V12.5.1 (2017-03); **WiFi module** - EN 301 489-1 V2.2.0 (2017-03), EN 301 489-17 V3.2.0 (2017-03), EN 60950-1: 2006 & A11: 2009 & A1: 2010 & A12: 2011 & A2: 2013, EN 300 328 V2.1.1 (2016-11)

### 1.3. Safety and precautions

**Intended use:** This product is solely designed and approved for use as an Electric Vehicle Supply Equipment (EVSE), used to supply charging current to EVs and PHEVs that do not require ventilation. It is intended to be used within specifications and only with the appropriate auxiliary equipment and adequate wiring. It is not intended to be repurposed or reconfigured for any application or use not within its specification. Failure to operate the device as intended may result in severe damage to equipment and personnel and poses a fire and explosion hazard.

**Risk of electric shock:** This device utilizes voltages that pose an immediate threat to life. It shall be installed only by a licensed or experienced electrician as per all regional and national electric regulations in effect. The device and auxiliary equipment shall be carefully inspected for signs of damage (cracked case, frayed or exposed conductors, and compromised insulation) before installation or use. Any installation or servicing activities shall be executed only after the mains supply has been disconnected from the main breaker or by physically disconnecting the supply conductors at the main distribution board.

This device is intended to be connected to a centrally grounded system. The PE conductor shall be adequately sized and grounded to earth at the service equipment. The EVSE has a built-in RCD, which protects the downstream conductors from earth leakage events. In order to protect upstream conductors, a RCD can be used at the supply equipment, subject to regional and national regulations that apply.

**Risk of fire or explosion:** This device handles high voltages and currents. Use of improperly rated conductors can result in excessive heating, leading to a risk of fire and damage to the mechanical integrity of the system. AC grid connection shall be made in accordance with the device technical requirements to ensure that the installation is sufficient to supply the rated maximum current and power. The product uses relays, which can cause arcs during switching. The device shall be installed in a location free from flammable gases and liquids to avoid an explosion hazard.

**Mechanical:** The product is intended for wall or panel mounting. It shall not be installed on ceilings, floors, or inclined walls. To avoid mechanical damage, the product shall be mounted as described in the installation guide, and using the specified tools and materials. Proper Personal Protective Equipment is recommended, including but not limited to: eye protection, shock protection, gloves and other appropriate protection.

## 2. Installation guide

### 2.1. Pre-requisites

#### 2.1.1. Tools and materials

##### 2.1.1.1. Tools

- A set of Torx, Phillips, and Flathead Screwdrivers with insulated handles
- Torque limited drill or cordless screwdriver, drill bits for large diameters (step cone up to 28mm)
- Hammer drill and bits
- Electrician kit, including pliers, strippers, ferrule and RJ-45/22 crimping tools

##### 2.1.1.2. Materials

- Conductors (insulated single-core or stranded), conduit, cable tie-downs, cable clamps
- Signal cables (UTP5 and 2x2 twisted pair cable)
- Connectors (RJ-45/22) and ferrules
- Insulation materials
- Wall anchors (e.g. with 4x17 screw or similar) for mounting the EVNET body

#### 2.1.2. Site survey and selection

The EVNET can draw up to 32A at 230VAC and shall be installed on a dedicated circuit. The entire building electrical installation must be adequately sized to accept this load under peak loading conditions. Ensure that all elements of the electrical installation, from the utility connection, through to the dedicated EVNET circuit are adequate for the rated power.

Ensure that the distribution panel has a position for a dedicated circuit breaker. Details are provided in section 2.1.3 regarding its rating and possibilities to derate.

The EVNET is designed for indoor and outdoor installation. To ensure a long service life, select a location that is not exposed to harsh elements, such as direct sunlight and rainfall, has proper ventilation and normal humidity.


Consideration about connectivity must also be made. For example, if the EVNET is to be connected online via Wi-Fi, select a site within range of the wireless network to ensure a steady connection. Alternatively, select a site with easy access to a wired network connection or mobile network coverage. Consider that the CT clamp, which is installed at the main distribution panel, needs a wired connection to the charger.

#### 2.1.3. Electrical wiring and breaker requirements

##### 2.1.3.1. Calculating circuit voltage drop and sizing circuit wiring and breaker

In order for the EVNET to provide full charging power, it must be supplied through a dedicated circuit capable of handling the full 32A of current with less than 10 VAC voltage drop. The circuit's nominal rating should be no less than 40A. The circuit can be implemented with solid or stranded copper

wire, or copper-clad aluminum wire. Stranded conductors shall be connected to the device only after a ferrule is installed.

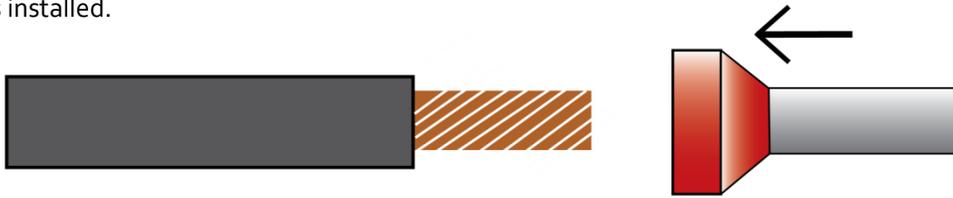

Derating guideline for single-phase EVNET		
Circuit Capacity*, A	Max Charging Current, A	Max Delivered Power, kW
40	32	7.4
32	25	5.8
25	20	4.6
20	16	3.7
16	13	3.0

\* C-curve rating of circuit breaker


The following table can be used to determine the approximate voltage drop at peak currents (calculated at 40A), based on the installed circuit total length, conductor material, and conductor cross-sectional area. **The installed length is the running distance from the source panel to the EVNET** (the table takes into account resistance in both legs of the circuit).

Installed length, m	Voltage drop in copper conductor at 40A, VAC			
	Area, mm <sup>2</sup>			
	4*	6**	10	16
5	1.7	1.2	0.7	0.4
10	3.4	2.3	1.4	0.9
15	5.2	3.5	2.0	1.3
20	6.9	4.6	2.7	1.8
25	8.6	5.8	3.4	2.2
30	10.3	7.0	4.1	2.6
35	12.0	8.1	4.8	3.1
Note: Shaded areas indicate excessive voltage drop *recommended minimal conductor area for 16A charging ** recommended minimal conductor area for 32A charging				
Installed length, m	Voltage drop in aluminum conductor at 40A, VAC			
	Area, mm <sup>2</sup>			
	4	6*	10**	16
5	2.6	1.8	1.1	0.7
10	5.3	3.5	2.2	1.4
15	7.9	5.3	3.2	2.0
20	10.6	7.0	4.3	2.7
25	13.2	8.8	5.4	3.4
30	15.8	10.6	6.5	4.1
35	18.5	12.3	7.6	4.8
Note: Shaded areas indicate excessive voltage drop *recommended minimal conductor area for 16A charging ** recommended minimal conductor area for 32A charging				

The circuit voltage drop at peak load can also be determined using a test load  $R_L$  of lower power rating. The voltage drop is calculated from the difference between the open-circuit and loaded voltage at the circuit load side: **Voltage drop** =  $V_{\text{open-circuit}} - V_{\text{Load}}$



The nomograph below can be used to calculate the circuit voltage losses at peak current. For a given test load, a line can be drawn from the origin to the corresponding value on the upper horizontal axis. Then, the measured voltage drop can be matched to the corresponding peak current drop by reading out the left vertical axis. The nomograph includes sample plots for 1-4 kW test loads and assumes a nominal 230V at which the test load is specified.

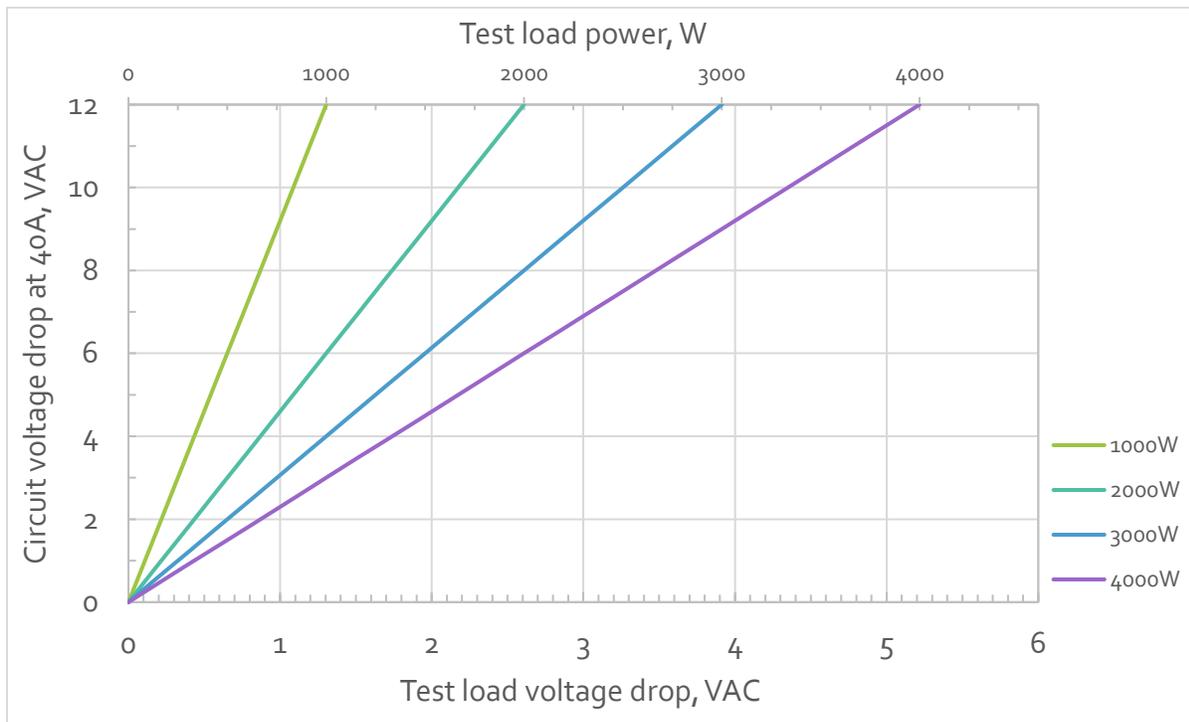


In circumstances where the supply installation is inadequate for the full charging output of the EVNET, refer to the derating guideline presented in Table 2 and set the maximum output current accordingly when commissioning the EVNET as per section 2.5.2.

#### 2.1.3.2. Grounding considerations

In the installed supply circuit, the grounding conductor must be rated to carry the full return current in the event of a fault and must be adequately sized (matching the capacity of the L and N conductors).



## 2.2. Installation: Mechanical

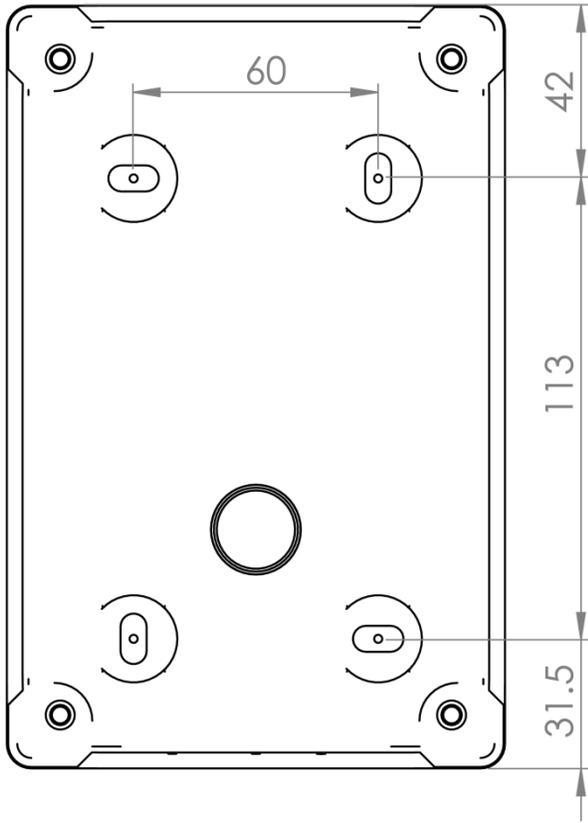



The four main screws fastening the main body of the EVNET are located in the four corners of the charger body, and may be directly accessed (the felt protecting pads may have to be removed).

The EVNET is intended for wall-mounting via four holes in the enclosure lower body, as seen in Fig. XX. The holes may be drilled to fit standard wall anchor bolts or screws. Note the location and spacing of the mounting hole centers. Do not drill holes outside the external perimeter of the mounting holes (as indicated in the figure).

Prior to mounting the body, drill the holes to accept the respective cable glands for supply and signal wiring, and with tethered models, the charging cord. Some EVNET cases have drilling centers indented in the plastic body, which can serve as guides for drilling the gland openings.

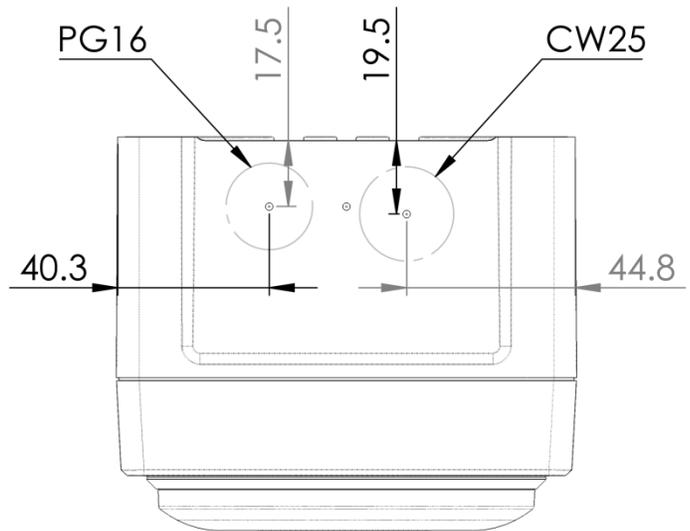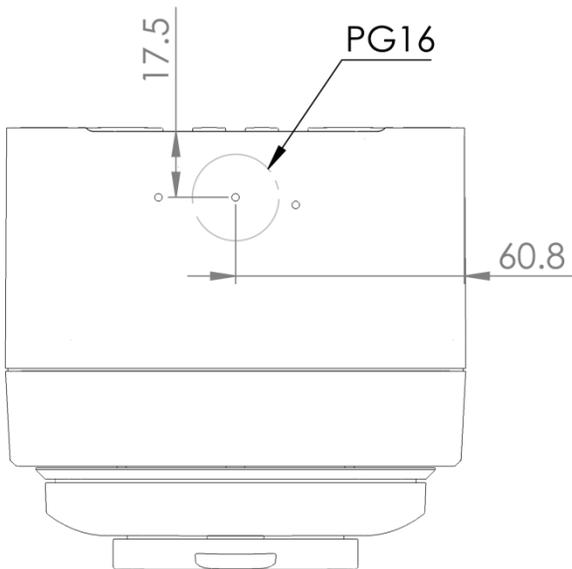


2.2.1. SIM card and GSM antenna connection

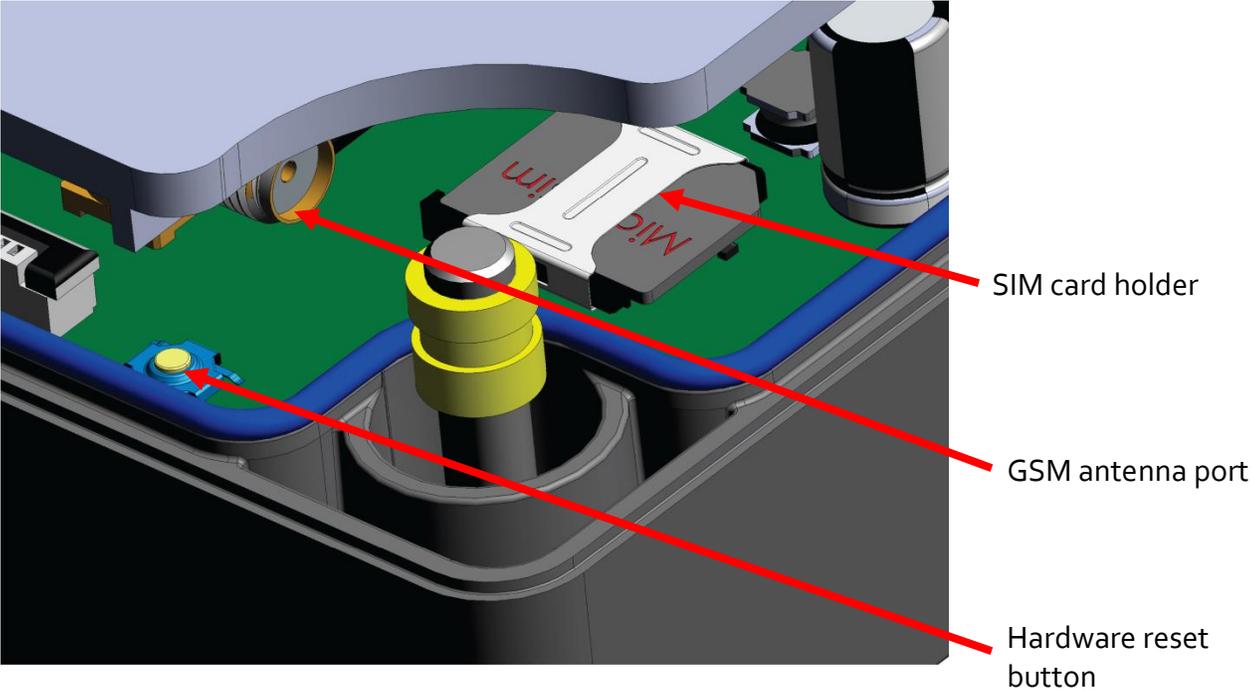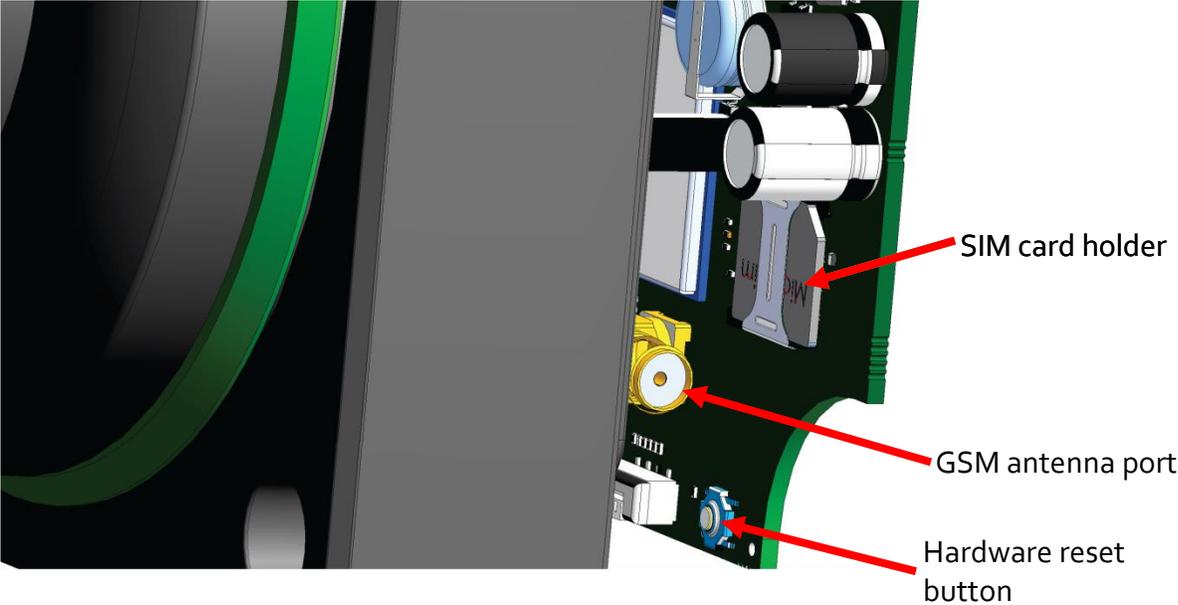

## 2.3. Installation: Electrical


### 2.3.1. Overall system wiring diagram

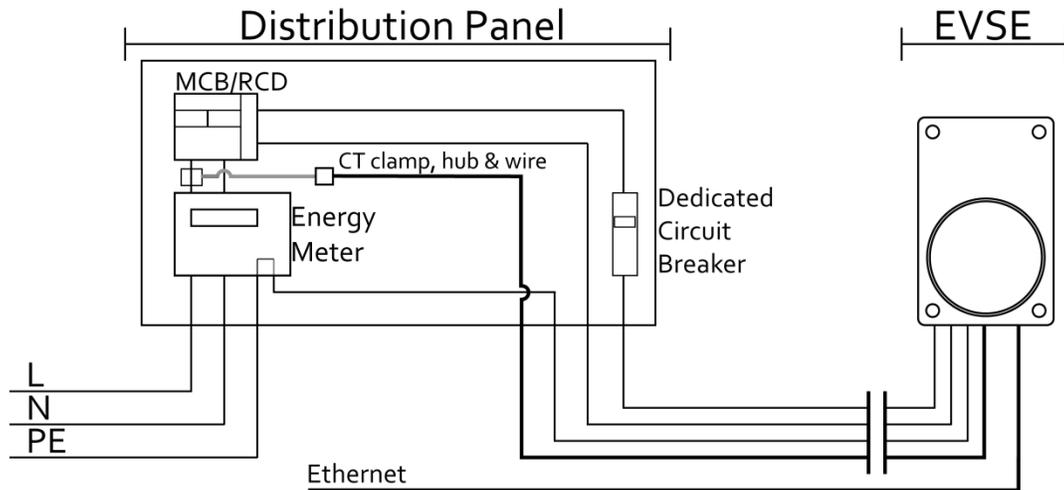

**Useful hint:** Due to the universal availability of CAT5 UTP cable, it is advisable to use it as a combined cable for the Ethernet and CT clamp connections, avoiding a second run of signal wires. Two twisted pairs are used for the CT clamp connection and two for the Ethernet Tx and Rx lines. The following table summarizes a suggested connection scheme, consistent with RJ-45B wiring scheme.

CT Clamp connection (RJ-22)			Ethernet connection (RJ-45-B)		
Pin #	Wire Color	Designation	Pin # *	Wire Color	Designation
1	brown-white	VCC	1	orange-white	Tx+
2	blue	A	2	orange	Tx-
3	blue-white	B	3	green-white	Rx+
4	brown	GND	6	green	Rx-

\* Pins 4,5,7,8 are not connected!

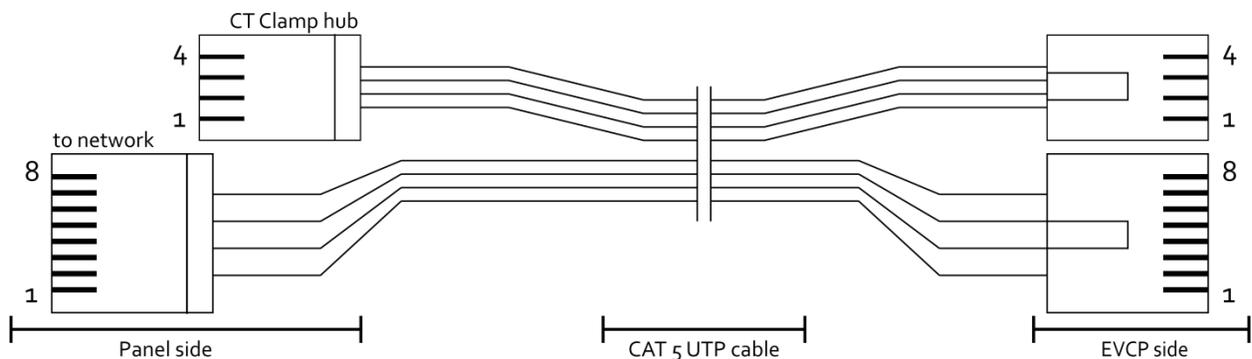


### 2.3.2. EVNET wiring diagram

The power and signal conductors can be connected to the device after the EVNET body has been mounted to the wall and the cable glands have been installed. The conductors are pulled through the gland with enough slack to make the connections without strain. The terminals are intended to be fastened with a flathead screwdriver at 1.5Nm torque.

**Safety note:** before working with bare conductors, ensure that the power is disconnected and the circuit is not live!

#### 2.3.2.1. Socketed model

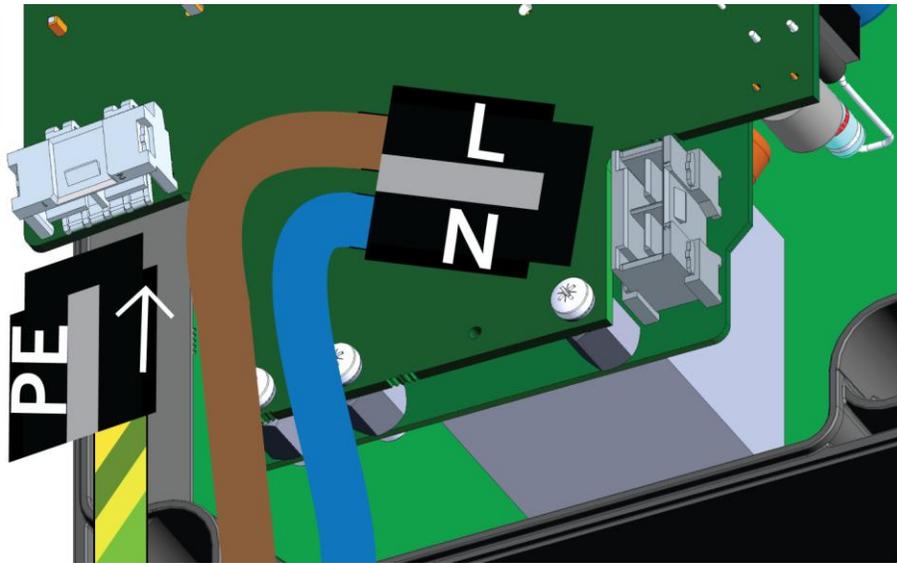


The connection terminal is located on the EVNET body. One side is connected to the EVNET board via short conductors that have been prepared at the factory. If the connecting cables are detached from the main assembly, the following diagram illustrates their connection.

The body has markings in the plastic that denote the proper position of the incoming conductors. The connection is

illustrated in Fig XX

Ethernet and CT clamp connections are made to the main board of the device via RJ-45 and RJ-22 sockets, respectively (see Fig X and X). No other connections have to be made.

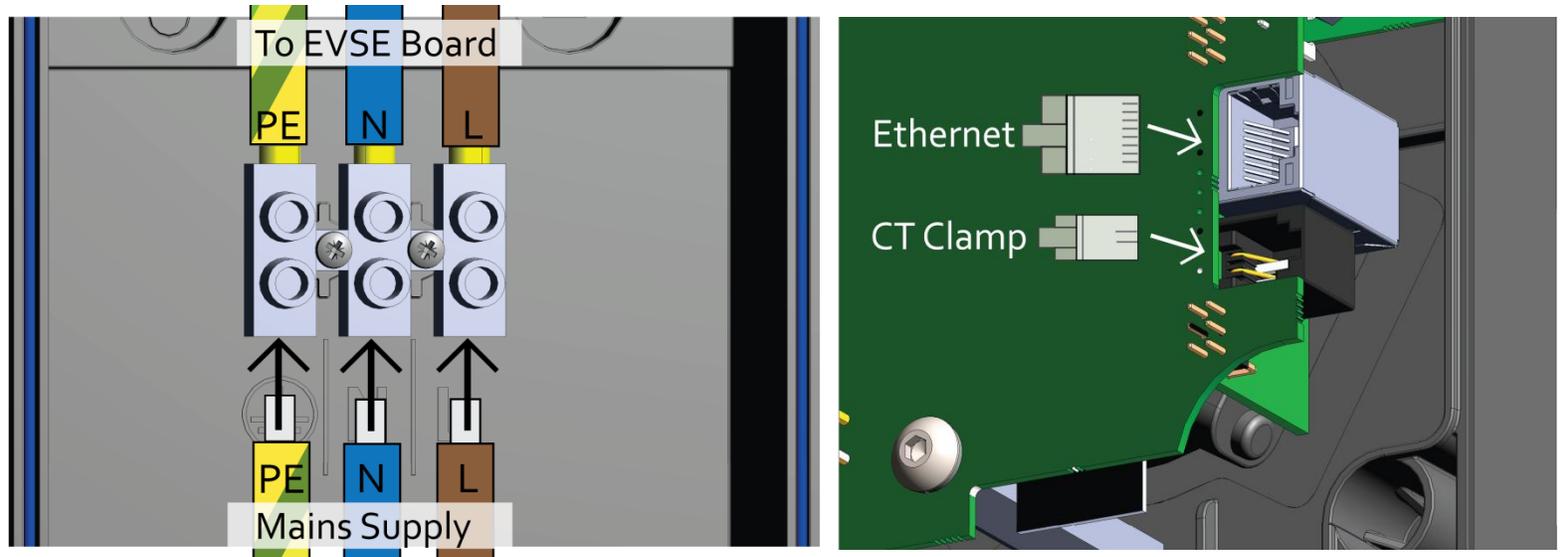


#### 2.3.2.2. Tethered model

On the tethered model, the terminal block is located on the back side of the main board. It is used for making the connections between the charger and the incoming supply, as well as between the charger and the supplied charging cord. This also requires that the control pilot (CP) signal wire from the charging cord is connected to the EVNET as illustrated in Fig X.

Ethernet and CT clamp connections are made to the main board of the device via RJ-45 and RJ-22 sockets, respectively (see Fig X and X). No other connections have to be made.

**Note: The power conductors between the EVNET main assembly and the terminal block have been pre-installed in the proper orientation and location. To ensure proper functionality, do not attempt to disconnect or rewire them!**

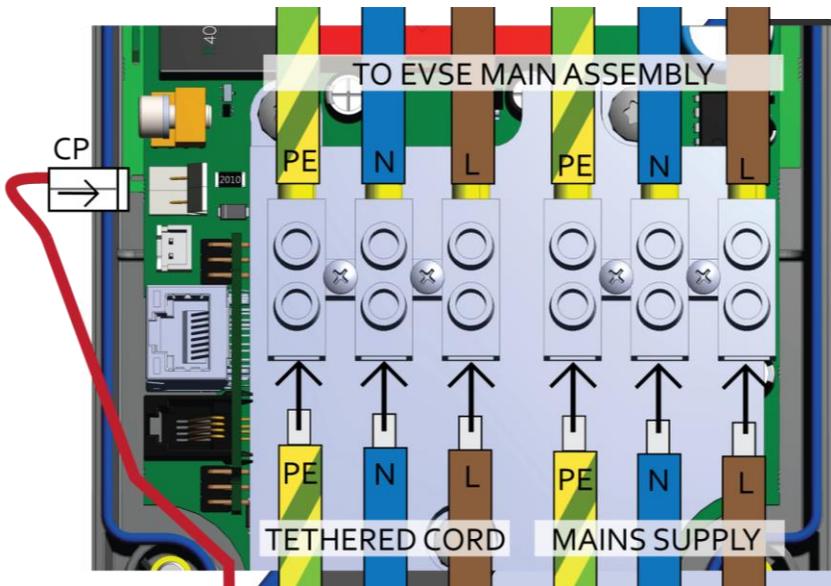

## 2.4. Installation: CT clamp

The CT clamp is intended to be installed ahead of the MCB. It monitors the total system current draw and relays the values to the EVNET, which can then regulate its output power to prevent the MCB from tripping.

Once installed, the CT clamp can be configured in the web client, as described in section 2.5.1

## 2.5. Installation: commissioning

Only commission the EVNET after all electrical and mechanical prerequisites have been fulfilled.

Before switching on the power to the EVNET circuit, ensure that all electrical connections have been made securely and that no conductors remain exposed or touching.

Ensure that the two sections of the device have been firmly secured with the mounting bolts.


On power-up the EVNET will provide visual and sound indication. It will beep briefly and the RGB light ring will light in yellow. The device can then be configured via the web client. Until it is configured, it will remain in the same state, indicated by a constant yellow light.

## 2.5.1. Accessing the web client and preview


The EVNET has a backend that is accessible via a web interface. The web client can be accessed from any HTML browser on a Wi-Fi enabled device, such as a smartphone, tablet, or laptop.

On startup, the EVNET broadcasts its name and serial number as a Wi-Fi network. After entering the network pass code, the device will be connected.

**Note: some mobile devices may notify that they are connected to a network but have no internet access. Such warnings should be waived and the device allowed to go through with the connection.**

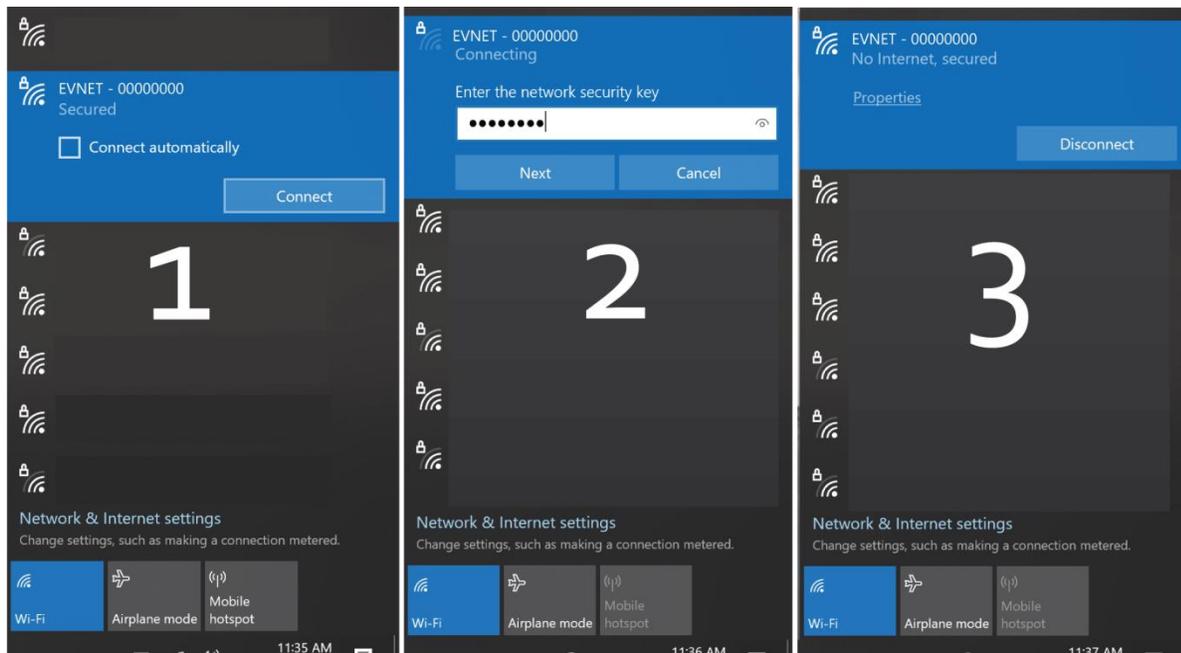

In a web browser, enter the index IP address (<https://192.168.4.1/index.html>). Ignore certificate warnings if any arise; if certificate validation warnings persist, switch to a different browser (recommended – Firefox, Edge, Chrome, Safari):

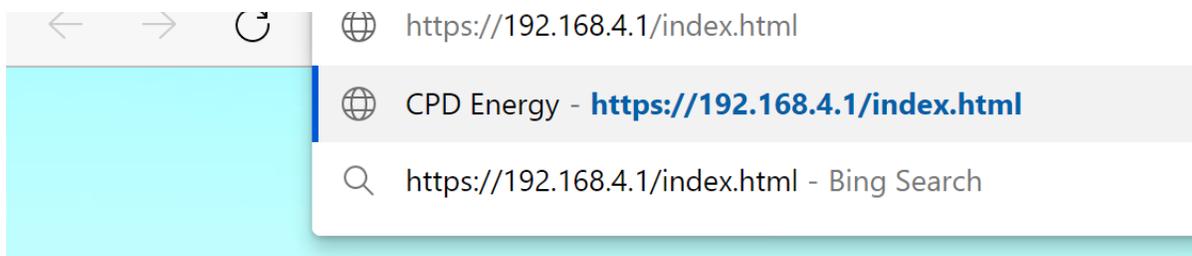

This will afford the main page of the EVPoint web client - Device Status and Control – and a navigation bar on the left:



## Device Status and Control

*"Device status" lists all the important conditions of the charger, including communication and device states*

Device Status	
Device Version:	1.5.7.000014.011015+25-g062041c.011015
RTM Status:	Online
Network Status:	Online
Active Interface:	WiFi
Backend Status:	Connected
EVSE Status:	Available
EV Status:	Disconnected
OCPP Status:	Available
Plug&Charge:	Enabled
Charger Limit:	DeviceCurrentLimit

*All pages feature "Restart" and "Refresh" buttons to power cycle the device or request the page again*

*"Measurements" gives the instantaneous values of voltage, current, and power for the device.*

### Power Meter Measurements

Power(Imported from grid):	0.000 kWh
Power(exported to grid):	0.000 kWh
Active Power:	0.000 kW
Voltage(L1-N):	224.9 V
Voltage(N):	2.6 V
Current:	0.000 A
Temperature(Package):	30° C
Temperature(Relay):	25° C

*"Device control" allows execution of commands to the EVNET*

### Device Control

Stop Wifi Scan   Clear Faults

Network Configuration has important settings that need to be configured when deploying the EVNET, such as the internet network interface and possible fallback (secondary) interfaces:

Device Status and Control

Network Configuration

Date & Time

Admin Panel

### Network Configuration

RESTART REFRESH

*Enabled – the charger is available for plug-in charging when offline*

*Disabled – the charger is not available to charge when offline*

#### Offline Mode Configuration

Plug & Charge

Enable

Disable

APPLY

#### Network Interfaces Configuration

Select main network interface      Select fallback network interface

<input type="radio"/> Not Set	<input checked="" type="radio"/> Not Set
<input checked="" type="radio"/> WiFi	<input type="radio"/> WiFi
<input type="radio"/> Ethernet	<input type="radio"/> Ethernet
<input type="radio"/> GSM	<input type="radio"/> GSM

APPLY

*"Network interface" sets the primary and secondary choices for connecting to the internet.*

#### Ethernet Interface

*"GSM interface" is used to configure mobile data settings*

#### GSM Interface

APN: em

RSSI: N/A

BER: N/A

Preferred Operator: N/A

Preferred Operator List:

#### APN Change

APN

SUBMIT

*Set access credentials of Internet network (home or office router login)*

#### Wireless Interface




Change Access Point	Change Charger Credentials
SSID	Charger SSID
Password	Charger Password

SUBMIT      SUBMIT

*Change credentials of charger's network*

Additional admin login:

erified, the navigation bar shows additional ite

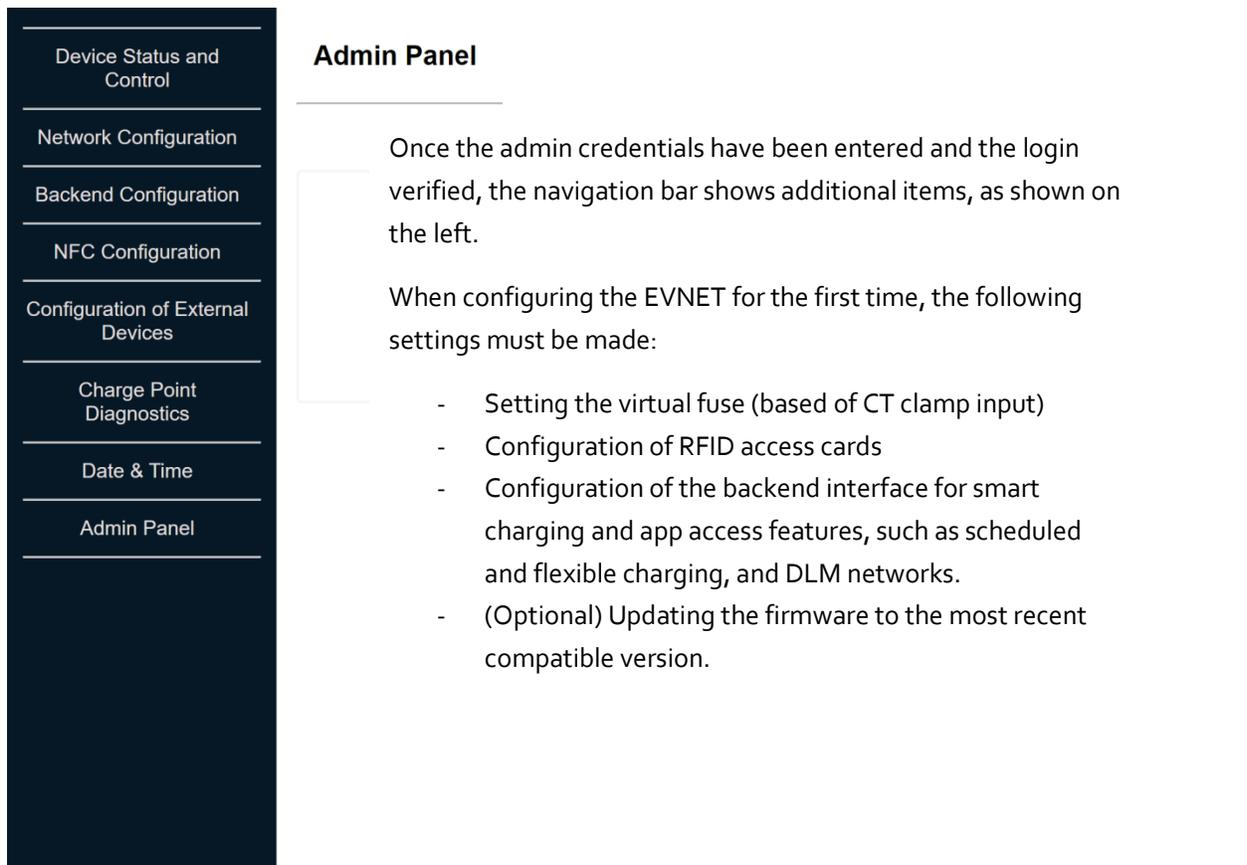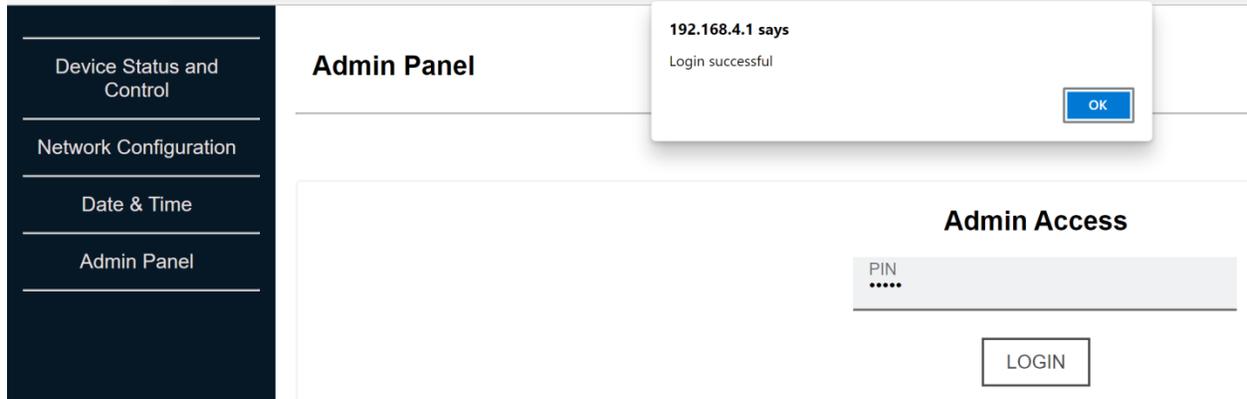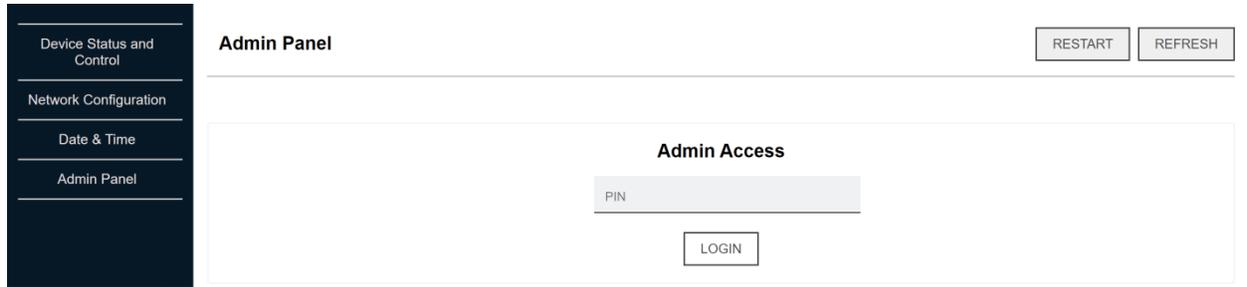

Setting the virtual fuse limit is done in the “Configuration of External Devices” tab, which can also be used to configure other devices on the RS-485 bus, used for the CT clamp communication.

The screenshot shows the 'Configuration of External Devices' page. On the left is a dark sidebar with menu items: Device Status and Control, Network Configuration, Backend Configuration, NFC Configuration, Configuration of External Devices (highlighted), Charge Point Diagnostics, Date & Time, and Admin Panel.

The main content area is divided into two sections:

- Main Fuse Configuration:** Displays 'Main Fuse Limit: 60.0 A' and 'Main Fuse Reading: 0.0 A'. Below this is a 'Change Main Fuse Rating' section with a text input field labeled 'Main Fuse Rating' and a 'SET' button.
- RS485 Bus Configuration:** A table with columns: Groups, Device 1, Device 2, Device 3, and Device 4. All device cells contain 'N/A'. Below the table are 'SCAN' and 'SAVE CONFIG' buttons.

To configure RFID access cards, open the “NFC Configuration” tab. Here, the EVNET can be set into a “Learn” mode via the “ADD NEW” button, whereby tapping an access card on the reader section of the device will cause it to be entered and memorized:

The screenshot shows the 'NFC Configuration' page. The sidebar is the same as in the previous image, with 'NFC Configuration' highlighted.

The main content area includes:

- 'NFC Configuration' header with 'RESTART' and 'REFRESH' buttons.
- 'Authorization List' table with columns: ID Tag, Status, Type, Added On, Best By, and Control. One entry is visible: ID Tag '5B00C3F989', Status 'Active', Type 'Main', and a 'REMOVE' button.
- An 'ADD NEW' button centered below the table.

This screenshot shows the 'NFC Configuration' page after a successful action. A dialog box is displayed with the following text:

**192.168.4.1 says**  
Learn mode is active. Place the new RFID card onto the reader.  
[OK]

Below the dialog, the 'Authorization List' table is updated with a new entry:

ID Tag	Status	Type	Added On
5B00C3F989	Active	Main	

The EVNET will come with a preconfigured backend server address and UID, which can be found and, if necessary, changed, in the "Backend Configuration" tab:

**Backend Configuration** RESTART REFRESH

**Backend Details**

*Current server address and UID* Current server address: wss://cpc.evpoint.bg:443/evpoint/  
Current UID: 981273

*UID and server web address may be changed in accordance to the OCPP provider*

**Change UID**

UID

**Change Web Address**

Web Address

*Note: changing the UID does NOT change the device serial #, as that is hardwired*

The "Charge Point Diagnostics" tab contains useful troubleshooting information:

**Charge Point Diagnostics** RESTART REFRESH

*RTM: internal diagnostic* **RTM Information** *RTM error code: a.k.a. vendor error code. Can be used to troubleshoot EVNET faults, see appendix.*

Ensure that OPB and PRT are set to "1", otherwise contact manufacturer.

OPB Code:	1
PRT Code:	1
RTM Err Code:	0x0000

**OCPP network information, can be used to troubleshoot connection issues between the EVNET and the OCPP backend** **Network Information**

IPv4:	192.168.66.116
WiFi MAC:	b8:f0:09:94:8d:2c
ETH MAC:	b8:f0:09:94:8d:2f

*Internal use : only for logging data* **Log Over Network**

Status:	Inactive
IPv4:	0.0.0.0
Port:	Not Set

ipv4

port

START LOG

**Firmware Update Control**

Status:	Idle
Progress:	0%
Custom vendor err:	0x0000
Internal vendor err:	0x0000
Update finish err:	0x0000

**Firmware Update**

|

SUBMIT

The "Update" section allows the configurator to set a firmware update via an Internet address pointing to a firmware update package. The address is set in the address text box and "Submit" is clicked. The update details are monitored above. Note that the EVNET will enter one or more several reset states while the update is being executed and the web client may become unresponsive at these times. Updates are usually done remotely via the OCPP server but may need to be executed locally for troubleshooting and diagnostics.

**Useful hint:** to verify that the firmware update URL is valid, it can be copied into an HTML browser and accessed, whereby a download should automatically begin of a ".bin" file type. If either the download does not begin or the downloaded file is not consistent with a firmware upgrade file, the user should verify that the address is valid and correct.

## 2.6. Installation: troubleshooting

### 2.6.1. Verifying charger functionality:

At power on, the EVNET has default settings and configuration, which allow it to work as a basic charger in the offline state. It is possible to verify its basic functionality by plugging in an EV and observing that the charger starts a charging session. The web client main page can be used to verify that the charger is properly measuring electrical values.

Common issues during commissioning:

1. No sound or light indication at power-on: the EVNET is designed to always beep and light its RGB ring at power on, to indicate that all components of the device are functional. The most common cause of missing indication is that there is a bad connection along the circuit and the EVNET's power terminals are not receiving mains voltage. Verify that the circuit is properly connected and that the "L" terminal is receiving 230VAC nominal from the phase conductor.
  - a. An alternative failure mode is a defective or disconnected RGB ring. Verify that the RGB ring's flexible connector (located below the antenna port) is properly connected to the main assembly.
  - b. All other cases of no light or sound indication point to a defective EVNET unit. Refer back to the supplier for warranty servicing.
2. The LED ring lights up red/blinking red: The EVNET is indicating a fault. This means that all components of the device are functional, but there is an issue that prevents the overall device from proper operation.
  - a. The most common cause of faults when commissioning is a phase reversal. The EVNET is incorrectly connected to mains and the neutral, live, or earth conductors are switched. Verify that the EVNET is correctly wired to the grid.
  - b. Another common case is overvoltage due to incorrect supply wiring. In 3-phase installations, verify that the EVNET is not across two phases of the grid, but between a phase and neutral. Verify that there are no excessive voltages present on the power line. Check the circuit voltage drop to verify that the voltage is within nominal range.
  - c. Any specific fault can be identified and reset via the web client's main and diagnostics pages. Note that clearing a fault without removing the underlying problem will result in the EVNET to enter the same fault state after the reset.
  - d. Internal errors may be cleared by a power-cycle of the device. Disconnect it from power and after a short period, power it on again. Note that this does not work on every fault and is reserved as a simple troubleshooting step.
3. The device cannot connect to the OCPP backend
4. The device does not start charging when an EV is connected

## 3. User Manual

### 3.1. Using the charger and the app

After the EVNET charger has been correctly installed and set-up, it can be controlled via the EVPoint mobile app. Setting up the app is outlined in the following steps:

1. Install and open the EVPoint app on your mobile device.
2. If you have an EVPoint registration, enter your credentials to login into the app. Else, click on "Sign Up" and follow the instructions to create an account. You can later fill in and edit your profile information from within the app.
3. In the app, locate the "Home Charging" option in the lower left corner. If this is your first EVNET, a setup screen will follow. To connect your new EVNET to the app, you will need its ID, either as a QR code, or as a text string, and the designated PIN number. Follow the on-screen instructions to add the station to your account.
4. On the home charging main screen, your newly installed EVNET appears, along with information about its status and any active charging sessions.
5. You will be able to configure the EVNET from the configuration tab in the upper right corner.
6. The configuration screen contains 8 submenus:
  - a. Name: you can change the name of the station as it appears on the app
  - b. Location: you can set the accurate location of the EVNET on the map
  - c. Photo: you can add a custom photo of your newly installed EVNET to appear on the main page
  - d. SMART Charging: enables configuration of smart charging features. Follow the on-screen options to choose the type of smart charging option and configure its details.
  - e. Authentication: allows you to configure the type of authentication the charger requires to begin a charging session
  - f. Power Management: you can use power management to set the maximum available current for the charger. The maximum default value is 32A, and it can be set to a lower value in 1A increments.
  - g. Keep-Awake mode: To charge an EV with a delay or schedule, the EVNET needs to prevent the EV's onboard computer from going into an idle state. To keep the EV awake, the EVNET can continuously charge it at a relatively low power (6A or 1.4 kW) and increasing the power at the right time, known as "Minimum Power Mode". Alternatively, the EVNET can provide short bursts of power to the EV at regular intervals to prevent it from falling asleep until the scheduled session begins, also known as "Pulse Charge Mode". Depending on EV make and model, one or both of the modes will be able to maintain the car in an active state to accept full power charging at predetermined times.
  - h. LED Ring Brightness: the RGB LED ring on the face of the EVNET can be configured at three brightness levels to provide a suitable level of illumination relative to its environment.

3.1.1. DLM – using more than one charger in an installation (fleet, mixed/public use)

3.2. Troubleshooting (software and hardware problems) and FAQ

3.3. Maintenance and cleaning

The EVNET is designed to be maintenance-free during its lifetime. It is not intended to be repaired or serviced by the end user and any defects or issues should be addressed to the installer and manufacturer technicians.

The EVNET should be regularly cleaned with a dry or damp cloth by wiping the surfaces. Do not use soaps or solvents, such as methylated spirits, acetone, etc, to clean the surfaces, because they can damage the surface finish and structural integrity of the device.

Do not use pressure or steam washers to clean the EVNET, as it is not designed to withstand high-pressure water jets, which could result in water ingress and internal damage or short-circuits.

## 4. Appendix I: Error state description with error codes and light indication explained

EVNET RGB Light Ring Status Indicators					
Status	Online Illumination		Offline Illumination		Description
Available					Device is available to start a charging session. In the online state, it is connected to the OCPP backend. Offline, it may be set up as Plug-in Charge"
Preparing					The charger is preparing to start a charging session. Occurs when an EV is plugged in and the charger is waiting for authorization to being charging.
Charging					The EVNET is charging the EV as per app settings.
SuspendedEV					The EV has caused the EVNET to stop the charging session.
SuspendedEVSE					The EVNET has stopped the charging session.
Finishing					The EVNET is preparing to terminate the charging session.
Reserved					The EVNET has been reserved for a user (public chargers)
Unavailable					The charger is not available. This may have been set by the OCPP backend for diagnostic or service purposes.
Faulted					The EVNET has encountered a problem and is in a fault state. More information can be accessed via the web client (see 2.5.1).

Note: The two adjacent patches indicate whether the status lights are constantly lit (identical colors) or blinking - switching between the two different colors

### Temperature Current Limit Thresholds

The EVNET monitors its internal temperature at two points. If the temperature exceeds values considered to be dangerous to the electronics and safety, the charger will first limit its maximum charging current to lower its power dissipation. If the temperature still increases beyond that setpoint (79°C), the charger will stop the session and enter a "Fault" state.

Temperature, °C	Current limit, A
72	31.8
73	29.4
74	26.8
75	24
76	20.8
77	17
78	12
79	6

### RTM Errors

**RTM errors are generated by EVNET when an error occurs and the charging is stopped. They can be found as “RTM err code” in the Diagnostics tab of the web client.**

Code	Name	Description	Detailed Description
0x0001	EVSE_FAULT_RCD	RCD protection error	This error code is sent when the AC RCD protection is triggered. RCD or “Residual Current Device” is a fault current protection hardware used in chargers to protect the user from current leakage.
0x0002	EVSE_FAULT_NEUTRAL	Neutral line error	This error code is sent when one of the following occurs:
			The line terminal and the N terminal are swapped
			There is more than 70VAC between the N line and the earth
		There is a bad earth	
0x0004	EVSE_FAULT_OVERCURRENT	Overcurrent error	This error code is sent when the car decides to import higher current than charge point offers. If the current demand is 10% above the set current limit and lasts more than 6 seconds, the fault is generated. Note that the threshold is 10% of the present current limit, not the absolute maximum.
			This fault can be cleared by power cycling the system, by unplugging the charging cable or via the web client.
0x0008	EVSE_FAULT_RCD_DC	RCD DC protection error	This error code is sent when the DC RCD protection is triggered.
			Note that when the DC RCD is triggered the error code 0x0001 is also sent!
0x0100	EVSE_FAULT_DIODE_UNPRESENT	EV diode error - diode in EV not detected	Every car has a diode on the CP line as part of the charging standard. This error code is sent if the EVNET cannot detect the diode in the EV. The fault is in a problematic EV diode and is cleared by removing the plug
0x0200	EVSE_FAULT_PP_UNPRESENT	Proximity pilot not detected	This error code is sent when you plug in the charging cable and try to start a charging session, but the charging station cannot read the specifications of the charging cable. The charging session will not start.
0x0400	EVSE_FAULT_MIS_SING_HOST	Internal host error	For internal use only
0x0800	EVSE_FAULT_TEMPERATURE	Overheating error	This error code is sent when the temperature of the charging station reaches more than 79 degrees. At this point the charging station will stop charging at all. This fault is cleared when the charging station is power cycled or through the web client.

0x1000	EVSE_FAULT_OVERVOLTAGE	Overvoltage error	This error code is sent when the power supply voltage rises by more than 10% of nominal
0x2000	EVSE_FAULT_UNDERVOLTAGE	Undervoltage error	This error code is sent when the power supply voltage drops by more than 10% of nominal
0x4000	EVSE_FAULTS_AUTO_RECOVERY	Auto Recovery	The EVNET is designed to automatically recover from noncritical faults. This is an auto-recovery flag, sent together with another fault flag to indicate that the EVNET will attempt to recover from the fault. For example, in over/undervoltage situations, the EVNET will recover once the supply voltage falls back within its nominal value.
0x8000	EVSE_FAULT_CAL	EVSE calibration data error	The RTM has calibration data such as Voltage, Current, Power, Energy and RCD as well as the device Serial Number. The fault indicates that the RTM cannot access these data. This may require a technician to come and reset the charger to default values with a special tool.

## 5. Appendix II: OCPP and Manufacturer Configuration Keys

Supported Key	Custom key
AllowOfflineTxForUnknownId	
ChargingScheduleAllowedChargingRateUnit	
c_ChargingVentilatedEnabled	yes
c_DeviceLimit_I	yes
c_MainFuseLimit	yes
c_RCDProtectionType	yes
c_VoltageProtectionOffset	yes
GetConfigurationMaxKeys	
HeartbeatInterval	
LightIntensity	
MeterValueSampleInterval	
MeterValuesSampledData	
AllowOfflineTxForUnknownId	
AuthorizationEnabled	
AuthorizeRemoteTxRequests	
ChargeProfileMaxStackLevel	
ChargingScheduleAllowedChargingRateUnit	
ChargingScheduleMaxPeriods	
ClockAlignedDataInterval	
ConnectionTimeOut	

ConnectorSwitch3to1PhaseSupported  
c\_ChargingVentilatedEnabled  
c\_DeviceLimit\_I  
c\_MainFuseLimit  
c\_RCDProtectionType  
c\_VoltageProtectionOffset  
GetConfigurationMaxKeys  
HeartbeatInterval  
LightIntensity  
LocalAuthListEnabled  
LocalAuthListMaxLength  
LocalAuthorizeOffline  
LocalPreAuthorize  
MaxChargingProfilesInstalled  
MeterValueSampleInterval  
MeterValuesSampledData  
NumberOfConnectors  
SendLocalListMaxLength  
StopTransactionOnEVSideDisconnect  
StopTransactionOnInvalidId

## 6. Decommissioning and disposal

For disposal and decommissioning, the EVNET is designated as electronics waste and must be properly handled and disposed of as per national, regional, and local regulations.

To prevent hazardous electric shocks and the risk of arcing and fire, before decommissioning, ensure that power to the device is disconnected and it is not wired to any active systems

## 7. EVPoint EV7 setup procedure

### 1. Connecting to the Hotspot network of the charger:

- 1.1 The network of the charger is selected, the name is composed of the serial number of the charger.  
Enter the password EVP-1234 and check that it is entered correctly.
- 1.2 The use of this Wi-Fi network is confirmed even though there is no Internet access.  
If this step is skipped, it "forgets" the Wi-Fi network and starts over.
- 1.3 If connected successfully, it should say "Connected without Internet".

### 2. Connecting to the charger web interface:

- 2.1. This link is entered in the WEB BROWSER, not in the search box: <https://192.168.4.1/index.html>
- 2.2. After loading the web page, select the "Admin panel" menu and enter the password "admin".
- 2.3. After correctly entering the password, the vertical menu expands and the additional menus are revealed.

### 3. Internet connectivity setup:

- 3.1 If the charger needs to be connected to a Wi-Fi network, open the "Network Configuration" menu and select the main Wi-Fi interface, then confirm and restart the charger.
- 3.2 After it has restarted, it first checks if the phone/laptop has reconnected to the charger's Wi-Fi network after the restart and opens the web page <https://192.168.4.1/index.html>
- 3.3 In the "Network Configuration" page, under the Wireless Interface field it is located "Change Access Point".  
Enter the SSID of the network, paying attention to lowercase and uppercase letters and special characters  
The password is then entered, again paying attention to uppercase and lowercase letters and special characters  
After both fields are filled in, the "Submit" button is pressed, the screen should become darker and you should go to the top of the page where there is a window with a confirmation button to restart the station. Press the restart button and wait for it to restart. It then checks again if the phone/laptop has successfully connected to the station's Wi-Fi network.
- 3.4 The web interface of the page is loaded again and the "Device Status and Control" menu is selected. The following fields are checked there: Network status: Offline or Online  
Active Interface: Must be Wi-Fi if this connection method is selected.



## EU DECLARATION OF CONFORMITY

1. **Type/ Model product: EVNET-7KW-S-1PH: 32A S/N:3000XXXX - 3000XXXX**
2. **The manufacturer: "EV Net" Ltd.**  
15-17, Tintiava str., 1113, Izgrev, Sofia, Bulgaria
3. **This declaration of conformity is issued under manufacturer responsibility**

<b>4. Subject of the declaration: EVNET-7KW-S-1PH: 32A</b>
Electric vehicle supply equipment, Single-phase, Socket type

**5. The product described above accordance with the following European directives**

Reference no.	Title
2014/30/EU	DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility
2014/35/EU	DIRECTIVE 2014/35/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits
2014/53/EU	DIRECTIVE 2014/53/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 16 April 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of radio equipment and repealing Directive 1999/5/EC

**6. Relevant harmonized standards and normative documents used for the declaration**

Standard	Title
BS EN IEC 61851-1:2019	Electric vehicle conductive charging system - Part 1: General requirements
BS EN IEC 61851-21-2:2021	Electric vehicle conductive charging system - Part 21-2: Electric vehicle requirements for conductive connection to an AC/DC supply - EMC requirements for off board electric vehicle charging systems
BS EN 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 1: General requirements
BS EN 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems
BS EN 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 3: Software requirements

BS EN 61508-4:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 4: Definitions and abbreviations
BS EN 61508-5:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 5: Examples of methods for the determination of safety integrity levels
BS EN 61508-6:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 6: Guidelines on the application of IEC 61508-2 and IEC 61508-3
BS EN 61508-7:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 7: Overview of techniques and measures
EN 62368-1:2014/AC:2015	Audio/video, information and communication technology equipment - Part 1: Safety requirements

## 7. Additional Information:

The manufacturer declares on his own responsibility, that the product complies with the technical and safety regulations, that the product is safe and reliable under conditions of correct installation, use and maintenance as intended. The manufacturer accepted regulations that guarantee the product accordance with described above EU legislation.

Sofia

Date: 26/06/2021



Kamelia Stoykova

/Specialist Technical Control/



## EU DECLARATION OF CONFORMITY

1. **Type/ Model product: EVNET-7KW-T2-1PH: 32A S/N: 3000XXXX - 3000XXXX**
2. **The manufacturer: "EV Net" Ltd.**  
15-17, Tintiava str., 1113, Izgrev, Sofia, Bulgaria
3. **This declaration of conformity is issued under manufacturer responsibility**

<b>4. Subject of the declaration: EVNET-7KW-T2-1PH: 32A</b>
Electric vehicle supply equipment, Single-phase, Tethered type

### 5. The product described above accordance with the following European directives

Reference no.	Title
2014/30/EU	DIRECTIVE 2014/30/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility
2014/35/EU	DIRECTIVE 2014/35/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 26 February 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits
2014/53/EU	DIRECTIVE 2014/53/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 16 April 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of radio equipment and repealing Directive 1999/5/EC

### 6. Relevant harmonized standards and normative documents used for the declaration

Standard	Title
BS EN IEC 61851-1:2019	Electric vehicle conductive charging system - Part 1: General requirements
BS EN IEC 61851-21-2:2021	Electric vehicle conductive charging system - Part 21-2: Electric vehicle requirements for conductive connection to an AC/DC supply - EMC requirements for off board electric vehicle charging systems
BS EN 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 1: General requirements
BS EN 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems
BS EN 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 3: Software requirements

BS EN 61508-4:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 4: Definitions and abbreviations
BS EN 61508-5:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 5: Examples of methods for the determination of safety integrity levels
BS EN 61508-6:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 6: Guidelines on the application of IEC 61508-2 and IEC 61508-3
BS EN 61508-7:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems - Part 7: Overview of techniques and measures
EN 62368-1:2014/AC:2015	Audio/video, information and communication technology equipment - Part 1: Safety requirements

## 7. Additional Information:

The manufacturer declares on his own responsibility, that the product complies with the technical and safety regulations, that the product is safe and reliable under conditions of correct installation, use and maintenance as intended. The manufacturer accepted regulations that guarantee the product accordance with described above EU legislation.

Sofia

Date: 25.11.2021



Kamelia Stoykova

/Specialist Technical Control/